Bluetooth®
Numeric Keypad
with PC
Multimedia Control

Clavier numérique
Bluetooth®
avec contrôle
multimédia PC

Targus®

USER GUIDE

MANUEL DE L'UTILISATEUR

CE

FC N2953

Targus®

Visit our Website at www.targus.com/ca
Features and specifications subject to change without notice.
©2008 Targus Group International, Inc. and Targus, Inc.

Visitez notre Site: www.targus.com/ca
Caractéristiques et spécifications sujettes à modification sans préavis. ©2008 Targus Group International, Inc. et Targus, Inc.

Bluetooth®

Bluetooth Qualified Product ID# B03885

AKP03CA / 410-1012-002D

PMS Black 30%

PMS Black 100%

Table of Contents

English

Bluetooth® Numeric Keypad with PC Multimedia Control.....2

Français

Clavier numérique Bluetooth® avec contrôle multimédia PC...16

BLUETOOTH® NUMERIC KEYPAD WITH PC MULTIMEDIA CONTROL

Introduction

Congratulations on your purchase of the Targus Bluetooth Numeric Keypad with PC Multimedia Control. This keypad has a set of built-in media keys for easy wireless multimedia control. Its 33 feet / 10 meter operating range of Class II Bluetooth allows seamless connection, and is perfect for remote controlling your favorite media player.

Contents

- User Guide
- Bluetooth Media Keypad
- 2 x AA Batteries

System Requirements

Operating System
- Windows® 2000 / XP
- Windows Vista™

Hardware
- Bluetooth-enabled notebook or desktop PC

Installing the Battery

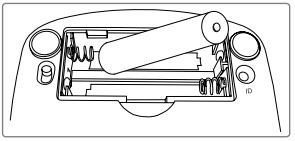

Keypad - back view

1 Remove the battery cover from the back of the keypad.

2 Insert the supplied battery, making sure that the positive (+) and negative (-) ends match the polarity indicators inside the battery housing.

NOTE: WHEN REPLACING THE BATTERY, YOU MAY USE ALKALINE OR OTHER HEAVY-DUTY NIMH BATTERY.
AVOID MIXING NEW AND USED BATTERIES IN A DEVICE.

3 Slide the battery cover back into position until it “clicks” firmly into place.

Turning the Keypad On and Off

• To power on the device, use the on/off switch located on the back of the keypad.

• To power off the device, use the on/off switch located on the back of the keypad. This feature should be used when traveling to prevent power loss.

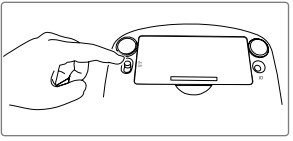

Using the Keypad
Definition of the Keys:

Keys	Function	How to operate
⏯	Play, Pause	Press to start or pause playing.
■	STOP	Press to stop playing.
🔇	MUTE	Press this key to mute volume.
🔉	Decrease Volume	Press this key to turn down volume.
🔊	Increase Volume	Press this key to turn up volume.
⏮	Return to previous track	Press this key to return to previous track.
⏭	Skip to next track	Press this key to skip to next track.
⏪	Fast forward	Press this key to speed forward play.
⏩	Reverse	Press this key to speed backward play.
Media Player	Launch default media player	Press this key to launch the default media player. The default player can be set in the “Set Program Access and Defaults” under the start menu or control panel.

NOTE: THE MULITMEDIA KEYS ARE COMPATIBLE TO MEDIA PLAYERS COMPATIBLE TO MICROSOFT’S API. PLEASE REFER TO YOUR SOFTWARE VENDOR FOR YOUR MEDIA PLAYER’S COMPATIBILITY.

Definition of the Keys:

. Del	NumLock on - inserts a decimal point NumLock off - deletes a number
0 Ins	NumLock on - enters "0" on the display NumLock off - emulates the Insert key
00 ,	NumLock on - enters “00” NumLock off - inserts a comma (,)
1 End	NumLock on - enters "1" on the display NumLock off - emulates the End key
2 ↓	NumLock on - enters “2” on the display NumLock off - moves the cursor down one line of text
3 PgDn	NumLock on - enters “3” on the display NumLock off - emulates the Page Down key
4 ←	NumLock on - enters “4” on the display NumLock off - moves one character to the left of the cursor position
5	NumLock on - enters "5" on the display NumLock off - No function
6 →	NumLock on - enters "6" on the display NumLock off - moves one character to the right of the cursor position
7 Home	NumLock on - enters "7" on the display NumLock off - emulates the Home key
8 ↑	NumLock on - enters "8" on the display NumLock off - moves the cursor up one line of text
9 PgUp	NumLock on - enters “9” on the display NumLock off - emulates the Page Up key

Establishing a Communications Link

Initial Configuration

Before you can begin using Bluetooth connectivity on your computer and other Bluetooth devices, you must set up your Bluetooth connection correctly. The Targus Bluetooth Media Keypad is designed to work with the three major software stack (protocol) standards: WIDCOMM, Toshiba and Microsoft. Please check your computer's documentation to see which software stack your computer has. Please contact your system vendor if your system does not support one of the following Bluetooth software standards.

Connecting with Bluetooth Software: WIDCOMM or Microsoft (XP & Vista)

1. Go to the Bluetooth Places icon located on your desktop or in the system tray and double click, then click Add a Bluetooth Device.



(Windows XP)

(Windows Vista)

2. The Bluetooth Wizard screen will prompt. Please follow the on-screen instructions.

Bluetooth Setup
Welcome to the Bluetooth Setup Wizard
This Wizard will help you set up your Bluetooth environment.
What would you like to do?
I know the service I want to use and I want to find a Bluetooth device that provides that service.
I want to find a specific Bluetooth device and configure how this computer will use its services.
I want to configure the Bluetooth services that this computer will provide to remote devices.
I want to change the name and/or device type that this computer displays to other Bluetooth devices.
< Back
Next >
Cancel

(Windows XP)

Add Bluetooth Device Wizard
Welcome to the Add Bluetooth Device Wizard
Before proceeding, refer to the "Bluetooth" section of the device documentation. Then set up your device so that your computer can find it:
- Turn it on
- Make it discoverable (visible)
- Give it a name (optional)
- Press the button on the bottom of the device (keyboards and mice only)
My device is set up and ready to be found.
Add only Bluetooth devices that you trust.
< Back
Next >
Cancel

(Windows Vista)

3. Please turn on the keypad and press the connection ID button located at the bottom of the keypad until the LED above the “Num Lock” blinks green light (discoverable mode). Click Next to continue pairing and the computer will search for the keypad.



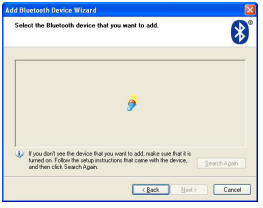
Add Bluetooth Device Wizard
Select the Bluetooth device that you want to add.
If you don't see the device that you want to add, make sure that it is turned on. Follow the setup instructions that came with the device, and then click Search Again.
Search Again
< Back
Next >
Cancel

(Windows XP)

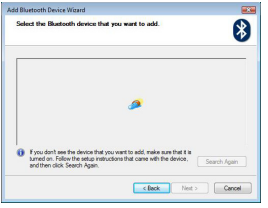
Add Bluetooth Device Wizard
Select the Bluetooth device that you want to add.
If you don't see the device that you want to add, make sure that it is turned on. Follow the setup instructions that came with the device, and then click Search Again.
Search Again
< Back
Next >
Cancel

(Windows Vista)

4. The confirmation window will appear after the computer finishes detecting the Bluetooth devices. Select the Targus Keypad and click Next to continue. (There may be one or more different Bluetooth devices detected.) If the keypad is not detected, please make sure the power is on and in discoverable mode. Press Search Again to re-pair the device.

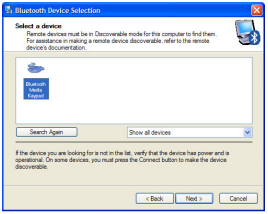
Bluetooth Device Selection
Select a device
Remote devices must be in Discoverable mode for this computer to find them. For assistance in making a remote device discoverable, refer to the remote device's documentation.
Bluetooth Media Keypad
Search Again
Show all devices
If the device you are looking for is not in the list, verify that the device has power and is operational. On some devices, you must press the Connect button to make the device discoverable.
< Back
Next >
Cancel

(Windows XP)

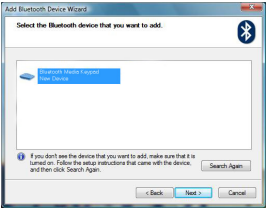
Add Bluetooth Device Wizard
Select the Bluetooth device that you want to add.
Bluetooth Media Keypad
If you don't see the device that you want to add, make sure that it is turned on. Follow the setup instructions that came with the device, and then click Search Again.
Search Again
< Back
Next >
Cancel

(Windows Vista)

5. A passkey is required to pair the Bluetooth keypad. Please follow the on-screen instuctions to finish installing the device.

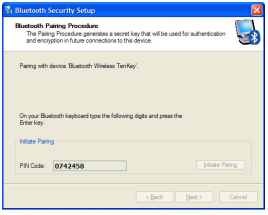
Bluetooth Security Setup
Bluetooth Pairing Procedure
The Pairing Procedure generates a secret key that will be used for authentication and encryption in future connections to this device.
Pairing with device 'Bluetooth Wireless TenKey'.
On your Bluetooth keyboard type the following digits and press the Enter key.
Initiate Pairing
PIN Code: 0742458
Initiate Pairing
< Back
Next >
Cancel

(Windows XP)

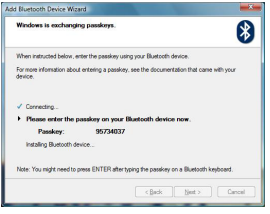
Add Bluetooth Device Wizard
Windows is exchanging passkeys.
When instructed below, enter the passkey using your Bluetooth device.
For more information about entering a passkey, see the documentation that came with your device.
Connecting...
Please enter the passkey on your Bluetooth device now.
Passkey: 95734037
Installing Bluetooth device...
Note: You might need to press ENTER after typing the passkey on a Bluetooth keyboard.
< Back
Next >
Cancel

(Windows Vista)

6. After the pairing keys are entered correctly, the computer will complete the installation. Please wait until the setup is finished.

Add Bluetooth Device Wizard
Completing the Add Bluetooth Device Wizard
The Bluetooth device was successfully connected to your computer. Your computer and the device can communicate whenever they are near each other.
To close this wizard, click Finish.
< Back
Finish
Cancel

(Windows XP)

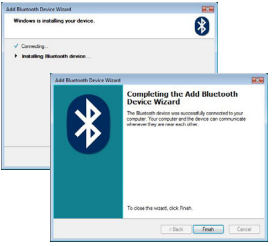
Add Bluetooth Device Wizard
Windows is installing your device.
Connecting...
Installing Bluetooth devices...
Add Bluetooth Device Wizard
Completing the Add Bluetooth Device Wizard
The Bluetooth device was successfully connected to your computer. Your computer and the device can communicate whenever they are near each other.
To close this wizard, click Finish.
< Back
Finish
Cancel

(Windows Vista)

Connecting with Bluetooth Software: TOSHIBA

1. Double click on the Bluetooth Manager icon in the system tray, and then click “Add New Connection.”

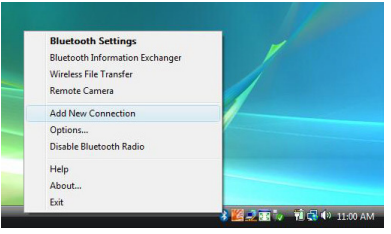

2. Please turn on the keypad and press the connection ID button located at the bottom of the keypad until the LED above the “Num Lock” blinks green light (discoverable mode). Click Next to continue pairing and the computer will search for the keypad.

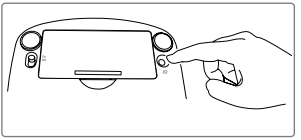

Add New Connection Wizard
This wizard will create the settings for Bluetooth device connection.
Please ensure your Bluetooth devices are on and set to discoverable.
In order to certify Bluetooth, there are times when the security setting is modified temporarily. When setup ends, it returns to the original setting automatically.
Express Mode (Recommended)
Custom Mode
This allows you to set the details for the connection.
< Back
Next >
Cancel

3. The computer will now search for the Bluetooth keypad and other Bluetooth devices. Please wait until the search is completed. Choose the device you wish to connect. There may be more than one Bluetooth device detected. Select Targus Bluetooth keypad and click Next to continue. If the keypad is not detected, please make sure the keypad is in discoverable mode and click Refresh.

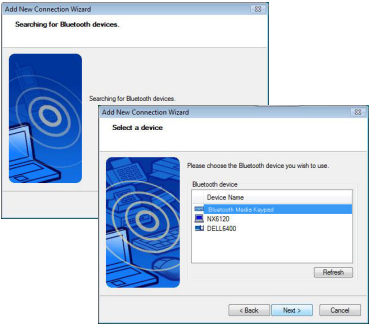

4. The computer will begin connecting with the keypad.

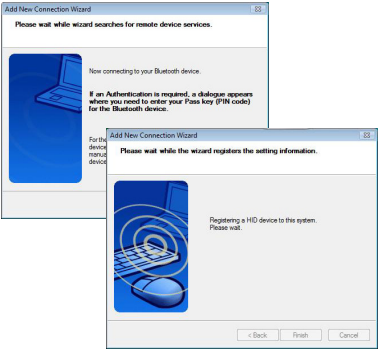
Add New Connection Wizard
Please wait while wizard searches for remote device services.
Now connecting to your Bluetooth device.
If an Authentication is required, a dialogue appears where you need to enter your Pass key (PIN code) for the Bluetooth device.
Add New Connection Wizard
Please wait while the wizard registers the setting information.
Registering a HID device to this system.
Please wait.
< Back
Finish
Cancel

5. An authentication is required for pairing the device, and a dialogue will appear. Please correctly enter the passkey using the remote keypad to continue setting up the device.

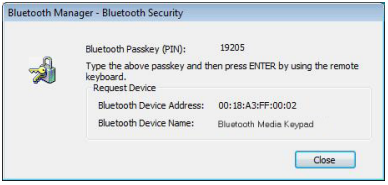
Bluetooth Manager - Bluetooth Security
Bluetooth Passkey (PIN): 19205
Type the above passkey and then press ENTER by using the remote keyboard.
Request Device
Bluetooth Device Address: 00:18:A3:FF:00:02
Bluetooth Device Name: Bluetooth Media Keypad
Close

6. The connection is established and setup is complete. The keypad is ready to use. If the connection is not successful, please click Back and search the device again. You may want to continue to add other Bluetooth devices or close the window.

Troubleshooting

What do I do if the keypad does not work?

• Make sure that the polarity of the battery is correct. The positive (+) and negative (-) ends must match the positive (+) and negative (-) connections in the battery housing.

• Make sure you have established a communications link. See "Establishing a Communications Link."

What do I do if the response time of the keypad is slow or it intermittently stops working?

• Increase the distance between the receiver and the base units of other wireless devices.

• Replace the battery.

Technical Support

For technical questions, please visit:

Internet: www.targus.com/support.asp
Email: info.cn@targus.com

Product Registration

Targus recommends that you register your Targus accessory shortly after purchasing it. To register your Targus accessory, go to: www.targus.com/registration.asp

You will need to provide your full name, email address, phone number, and company information (if applicable).

Warranty

Targus warrants this product to be free from defects in materials and workmanship for one year. If your Targus accessory is found to be defective within that time, we will promptly repair or replace it. This warranty does not cover accidental damage, wear and tear, or consequential or incidental loss. Under no conditions is Targus liable for loss of, or damage to a computer; nor loss of, or damage to, programs, records, or data; nor any consequential or incidental damages, even if Targus has been informed of their possibility. This warranty does not affect your statutory rights.

Regulatory Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.

FCC Statement

Tested to Comply

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna;
- Increase the separation between the equipment and receiver;
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected;
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications not authorized by the party responsible for compliance could void the user's authority to operate this product

WIDCOMM and the WIDCOMM logo are trademarks of WIDCOMM, Inc. Bluetooth and the Bluetooth logo are trademarks owned by Bluetooth SIG, Inc., U.S.A. and licensed to WIDCOMM, Inc..
Microsoft, Windows, Windows VIsta and Outlook are registered trademarks of Microsoft Corporation. All other trademarks and registered trademarks are the property of their respective owners.
Features and specifications subject to change without notice. All trademarks and registered trademarks are the property of their respective owners.

CLAVIER NUMÉRIQUE BLUETOOTH® AVEC CONTRÔLE MULTIMÉDIA PC

Introduction

Félicitations pour votre achat de ce Pavé numérique Bluetooth de Targus avec commandes multimédia pour PC. Ce pavé possède un jeu de touches multimédia incorporées pour le contrôle multimédia sans fil facile. Sa portée de 33 pieds/10 mètres de Bluetooth Classe II permets la connexion sans fil et s'avère parfaite pour la télécommande de votre lecteur de médias préféré.

Contenu

- Guide d'utilisateur
- Pavé numérique et multimédia Bluetooth
- 2 piles AA

Configuration requise

Système d'exploitation

- Windows® 2000 / XP
- Windows Vista™

Matériel

- Ordinateur portable ou PC de bureau Bluetooth

Installation des piles

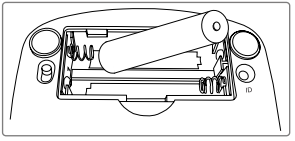

Pavé numérique - vue arrière

1 Enlèvent le couvercle des piles au dos du pavé.

2 Insérez les piles fournies, en s'assurant que les bouts positif (+) et négatif (-) correspondent aux indicateurs de polarité à l'intérieur du logement des piles.

NOTE : POUR REMPLACER LES PILES VOUS POUVEZ UTILISER DES PILES ALCALINES OU AUTRES HEAVY-DUTY NiMH. ÉVITEZ DE MÉLANGER DES PILES NOUVELLES ET UTILISÉES DANS UN DISPOSITIF.

3 Glissez le couvercle des pilles en arrière dans sa position initiale jusqu'à ce qu'il « clique » fermement à sa place.

Mise en marche et arrêt du pavé numérique

• Pour alimenter le dispositif, utilisez le commutateur « Marche/Arrêt » placé à l'arrière du pavé.

• Pour arrêter l'alimentation du dispositif, utilisez le commutateur « Marche/Arrêt » placé à l'arrière du pavé. Cette fonction devrait être utilisée pendant le voyage pour empêcher la perte d'énergie.

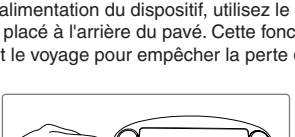

Utilisation du pavé
Définition des touches

Touches	Fonction	
⏯	Lecture, pause	Appuyez sur ce bouton pour lancer une lecture ou la mettre en pause
■	ARRÊT	Appuyez sur ce bouton pour arrêter la lecture en cours.
🔇	SOURDINE	Appuyez sur ce bouton pour couper le son.
🔉	Volume -	Appuyez sur ce bouton pour baisser le volume.
🔊	Volume +	Appuyez sur ce bouton pour augmenter le volume.
⏮	Piste précédente	Appuyez sur ce bouton pour sélectionner sur la piste précédente.
⏭	Piste suivante	Appuyez sur ce bouton pour sélectionner la piste suivante.
⏪	Avance rapide	Appuyez sur ce bouton pour effectuer une avance rapide.
⏩	Retour	Appuyez sur ce bouton pour effectuer un retour rapide.
Media Player	Lancement du lecteur de médias par défaut	Appuyez sur cette touche pour lancer le lecteur de médias par défaut. Le lecteur par défaut peut être fixé par "Déterminer l'Accès des programmes et les défauts" dans le menu Démarrer ou dans le panneau de configuration

NOTE : LES TOUCHES MULTIMÉDIA SONT COMPATIBLES AUX LECTEURS DE MÉDIAS COMPATIBLES AVEC L'API DE MICROSOFT. POUR LA COMPATIBILITÉ AVEC VOTRE LECTEUR DE MÉDIAS VEUILLEZ VOUS RÉFÉRER À NOTRE VENDEUR DE LOGICIEL

Définition des touches du clavier :

. Del	NumLock allumé - insertion du signe décimal NumLock éteint - supprime un chiffre
0 Ins	NumLock allumé - insère un « 0 » sur l'afficheur NumLock éteint - émule la touche Insertion
00 ,	NumLock allumé - insère « 00 » NumLock éteint - insère une virgule (,)
1 End	NumLock allumé - insère un « 1 » sur l'afficheur NumLock éteint - émule la touche Fin (End)
2 ↓	NumLock allumé - insère « 2 » sur l'afficheur NumLock éteint - déplace le curseur sur la ligne inférieure
3 PgDn	NumLock allumé - insère un « 3 » sur l'afficheur NumLock éteint - émule la touche Page suivante
4 ←	NumLock allumé - insère un « 4 » sur l'afficheur NumLock éteint - déplace le curseur un caractère à gauche
5	NumLock allumé - insère « 5 » sur l'afficheur NumLock éteint - aucune fonction
6 →	NumLock allumé - insère « 6 » sur l'afficheur NumLock éteint - déplace le curseur un caractère à droite
7 Home	NumLock allumé - insère « 7 » sur l'afficheur NumLock éteint - émule la touche Début
8 ↑	NumLock allumé - insère « 8 » sur l'afficheur NumLock éteint - déplace le curseur sur la ligne supérieure
9 PgUp	NumLock allumé - insère « 9 » sur l'afficheur NumLock éteint - émule la touche Page précédente

Établissement d'un lien de communication

Configuration Initiale

Avant de pouvoir commencer à utiliser la connectivité Bluetooth sur votre ordinateur et sur d'autres dispositifs Bluetooth, vous devez établir votre connexion Bluetooth correctement. Le Pavé numérique multimédia Bluetooth de Targus est conçu pour fonctionner avec las trois normes principales de logiciels (protocoles) : WIDCOMM, Toshiba et Microsoft. Veuillez vérifier la documentation de votre ordinateur pour voir quel est le logiciel employé par votre ordinateur. Veuillez entrer en contact avec votre vendeur de système si votre système ne soutient pas un des standards de logiciel Bluetooth suivants.

Connexion avec logiciels Bluetooth : WIDCOMM ou Microsoft (XP et Vista)

1. Aller à l'icône Mes endroits Bluetooth placée sur votre bureau ou dans la barre de système et faites un double clic, cliquez ensuite sur Ajouter un Dispositif Bluetooth.



(Windows XP)

(Windows Vista)

2. L'écran de l'Assistant Bluetooth surgira. Veuillez suivre les instructions à l'écran.

Bluetooth Setup
Welcome to the Bluetooth Setup Wizard
This Wizard will help you set up your Bluetooth environment.
What would you like to do?
I know the service I want to use and I want to find a Bluetooth device that provides that service.
I want to find a specific Bluetooth device and configure how this computer will use its services.
I want to configure the Bluetooth services that this computer will provide to remote devices.
I want to change the name and/or device type that this computer displays to other Bluetooth devices.
< Back
Next >
Cancel

(Windows XP)

Add Bluetooth Device Wizard
Welcome to the Add Bluetooth Device Wizard
Before proceeding, refer to the "Bluetooth" section of the device documentation. Then set up your device so that your computer can find it:
- Turn it on
- Make it discoverable (visible)
- Give it a name (optional)
- Press the button on the bottom of the device (keyboards and mice only)
My device is set up and ready to be found.
Add only Bluetooth devices that you trust.
< Back
Next >
Cancel

(Windows Vista)

3. Veuillez mettre en marche le pavé et appuyez le bouton d'ID de la connexion, placé au fond du pavé, jusqu'au ce que l'indicateur lumineux au-dessus de « Num Lock » se mette à clignote avec un feu vert (le mode de découverte). Cliquez sur « Continuer (Next) » pour continue le couplage et l'ordinateur cherchera le pavé.



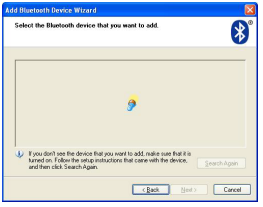
Add Bluetooth Device Wizard
Select the Bluetooth device that you want to add.
If you don't see the device that you want to add, make sure that it is turned on. Follow the setup instructions that came with the device, and then click Search Again.
Search Again
< Back
Next >
Cancel

(Windows XP)

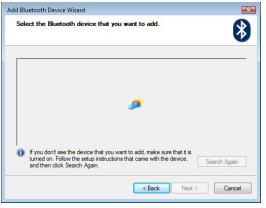
Add Bluetooth Device Wizard
Select the Bluetooth device that you want to add.
If you don't see the device that you want to add, make sure that it is turned on. Follow the setup instructions that came with the device, and then click Search Again.
Search Again
< Back
Next >
Cancel

(Windows Vista)

4. Après que l'ordinateur finit de détecter les dispositifs Bluetooth, une fenêtre de confirmation apparaîtra. Choisissez le Pavé Targus (Targus Keypad) et cliquez « Continuer (Next) » pour continuer. (Il peut y avoir un ou plusieurs dispositifs Bluetooth différents détectés.) Si le pavé n'est pas détecté, veuillez vous assurer qu'il est alimenté et qu'il est bien dans le mode de découverte. Appuyez sur « Rechercher de nouveau (Search Again) » pour ré-coupler le dispositif.

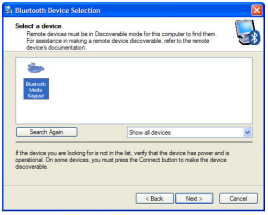
Bluetooth Device Selection
Select a device
Remote devices must be in Discoverable mode for this computer to find them. For assistance in making a remote device discoverable, refer to the remote device's documentation.
Bluetooth Media Keypad
Search Again
Show all devices
If the device you are looking for is not in the list, verify that the device has power and is operational. On some devices, you must press the Connect button to make the device discoverable.
< Back
Next >
Cancel

(Windows XP)

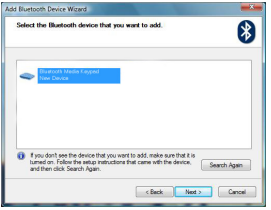
Add Bluetooth Device Wizard
Select the Bluetooth device that you want to add.
Bluetooth Media Keypad
New Device
If you don't see the device that you want to add, make sure that it is turned on. Follow the setup instructions that came with the device, and then click Search Again.
Search Again
< Back
Next >
Cancel

(Windows Vista)

5. Une clef de passe est exigée pour appareiller le pavé Bluetooth. Veuillez suivre les instructions sur l'écran pour terminer l'installation du dispositif.

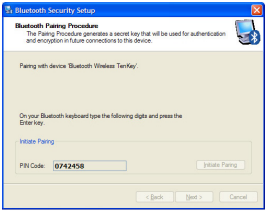
Bluetooth Security Setup
Bluetooth Pairing Procedure
The Pairing Procedure generates a secret key that will be used for authentication and encryption in future connections to this device.
Pairing with device 'Bluetooth Wireless TenKey'.
On your Bluetooth keyboard type the following digits and press the Enter key.
Initiate Pairing
PIN Code:
0742458
Initiate Pairing
< Back
Next >
Cancel

(Windows XP)

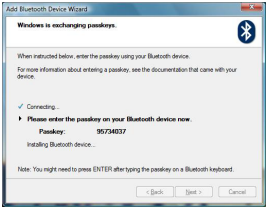
Add Bluetooth Device Wizard
Windows is exchanging passkeys.
When instructed below, enter the passkey using your Bluetooth device.
For more information about entering a passkey, see the documentation that came with your device.
Connecting...
Please enter the passkey on your Bluetooth device now.
Passkey:
95734037
Installing Bluetooth device...
Note: You might need to press ENTER after typing the passkey on a Bluetooth keyboard.
< Back
Next >
Cancel

(Windows Vista)

6. Après que les clefs de couplage sont entrées correctement, l'ordinateur achèvera l'installation. Veuillez attendre jusqu'à ce que l'installation ne soit terminée.

Add Bluetooth Device Wizard
Completing the Add Bluetooth Device Wizard
The Bluetooth device was successfully connected to your computer. Your computer and the device can communicate whenever they are near each other.
To close this wizard, click Finish.
< Back
Finish
Cancel

(Windows XP)

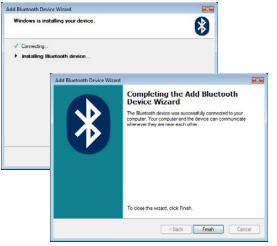
Add Bluetooth Device Wizard
Windows is installing your device.
Connecting...
Installing Bluetooth device...
Add Bluetooth Device Wizard
Completing the Add Bluetooth Device Wizard
The Bluetooth device was successfully connected to your computer. Your computer and the device can communicate whenever they are near each other.
To close this wizard, click Finish.
< Back
Finish
Cancel

(Windows Vista)

Connexion avec Logiciel Bluetooth : TOSHIBA

1. Faites un double-clic sur l'icône du Gestionnaire Bluetooth (Bluetooth Manager) dans la barre de système et cliquez ensuite sur « Ajoute une Nouvelle connexion (Add New Connection). »

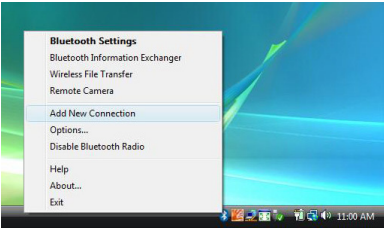

2. Veuillez mettre en marche le pavé et appuyez le bouton d'ID de la connexion, placé au fond du pavé, jusqu'au ce que l'indicateur lumineux au-dessus de « Num Lock » se mette à clignote avec un feu vert (le mode de découverte). Cliquez sur « Continuer (Next) » pour continue le couplage et l'ordinateur cherchera le pavé.

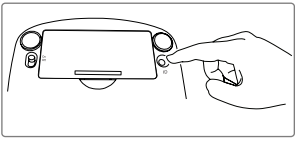

Add New Connection Wizard
This wizard will create the settings for Bluetooth device connection.
Please ensure your Bluetooth devices are on and set to discoverable.
In order to certify Bluetooth, there are times when the security setting is modified temporarily. When setup ends, it returns to the original setting automatically.
Express Mode (Recommended)
Custom Mode
This allows you to set the details for the connection.
< Back
Next >
Cancel

3. L'ordinateur cherchera maintenant le pavé Bluetooth et d'autres dispositifs Bluetooth. Veuillez attendre jusqu'à ce que la recherche ne soit achevée. Choisissez le dispositif que vous voulez connecter. Il peut y avoir plus qu'un dispositif Bluetooth détecté. Choisissez le pavé Bluetooth de Targus et le cliquez sur « Continuer (Next) » pour continue. Si le pavé n'est pas détecté, veuillez vous assurer qu'il est bien dans le mode de découverte et le cliquez sur « Rafraîchir (Refresh) ».

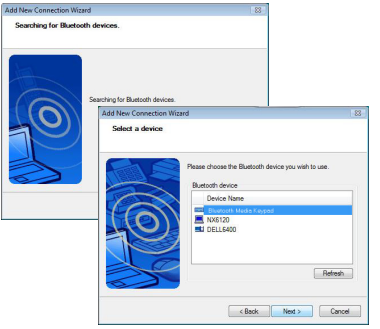

4. L'ordinateur commencera à se connecter avec le pavé.

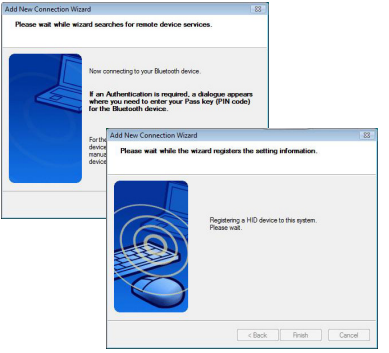
Add New Connection Wizard
Please wait while wizard searches for remote device services.
Now connecting to your Bluetooth device.
If an Authentication is required, a dialogue appears where you need to enter your Pass key (PIN code) for the Bluetooth device.
Add New Connection Wizard
Please wait while the wizard registers the setting information.
Registering a HID device to this system.
Please wait.
< Back
Finish
Cancel

5. Une authentification est exigée pour coupler le dispositif et un dialogue apparaîtra. Veuillez entrer correctement la clef de passe utilisant le clavier à distance pour continuer l'installation du dispositif.

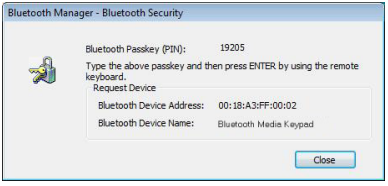
Bluetooth Manager - Bluetooth Security
Bluetooth Passkey (PIN): 19205
Type the above passkey and then press ENTER by using the remote keyboard.
Request Device
Bluetooth Device Address: 00:18:A3:FF:00:02
Bluetooth Device Name: Bluetooth Media Keypad
Close

6. La connexion est établie et l'installation est complète. Le clavier est prêt à utiliser. Si la connexion n'a pas réussi, veuillez cliquez sur « Arrière (Back) » et recherchez le dispositif de nouveau. Vous pouvez vouloir continuer à ajouter d'autres dispositifs Bluetooth ou fermer la fenêtre.

Dépannage

Que fais-je si le clavier ne marche pas ?

• Assurez-vous que la polarité des piles est correcte. Les bouts positifs (+) et négatifs (-) doivent correspondre aux contacts positif (+) et négatif (-) dans le compartiment des piles.

• Assurez-vous que vous avez établi un lien de communication. Voir « Établissement d'un lien de communication ».

Que fais-je si le temps de réponse du pavé est long ou il s'arrête intermittemment de travailler ?

• Augmentez la distance entre le récepteur et les unités de base d'autres dispositifs sans fil.

• Remplacez les piles.

Support technique

Pour des questions techniques, veuillez nous contacter aux coordonnées suivantes :

Internet : http://www.targus.com/support

E-Mail : info.cn@targus.com

Enregistrement du produit

Targus vous conseille vivement d'enregistrer votre produit Targus dans les plus brefs délais après son achat. Pour enregistrer votre accessoire Targus, allez à : http://www.targus.com/registration.asp Vous serez invité à fournir votre nom complet, votre adresse de courriel et des renseignements sur votre entreprise (le cas échéant).

Garantie

Targus garantit ce produit contre tout défaut de matériel ou de fabrication pour une durée d'un an. Si votre accessoire Targus s'avère défectueux sous cette garantie, nous veillerons à le remplacer ou à le réparer au plus vite. Cette garantie ne couvre pas les dommages résultant d'accidents, l'usure normale ou les pertes consécutives ou accessoires. En aucun cas, Targus ne pourra être tenu responsable de la perte matérielle ou de l'endommagement d'un ordinateur, ni de la perte de programmes, d'enregistrements ou de données ou de leur endommagement, ni de tous autres dommages conséquentiel ou accidentel, même si Targus a été préalablement informé de cette possibilité. Cette garantie n'a aucun effet sur vos droits statutaires.

Respect de la réglementation

Cet appareil est conforme à la section 15 des règlements de la FCC (Federal Communication Commission). Son utilisation est soumise aux deux conditions suivantes : 1) Cet appareil ne peut provoquer de brouillage préjudiciable. 2) Cet appareil doit absorber toute interférence réceptionnée, même si cela provoque des effets indésirables sur son fonctionnement.

Déclaration de la FCC
Testé et conforme

Cet appareil a été testé et déclaré conforme aux limites des appareils numériques de Classe B, selon la section 15 des règlements de la FCC (Federal Communication commission). Ces limites sont conçues pour assurer une protection raisonnable contre un brouillage préjudiciable lorsque l'appareil est utilisé dans un milieu résidentiel. L'appareil génère, utilise et peut diffuser de l'énergie sur les fréquences radio et, s'il n'est pas installé et utilisé conformément au mode d'emploi, il peut brouiller les communications radio. Il n'y a aucune garantie qu'un brouillage ne se produira pas dans un milieu particulier. Si cet appareil brouille les communications radio ou télévision, comme cela peut être confirmé en éteignant puis en allumant l'appareil, l'utilisateur peut tenter de corriger toute interférence en essayant une ou plusieurs des méthodes suivantes :

- Réorienter l'antenne réceptrice ou la placer à un autre endroit;
- Éloigner davantage l'appareil du récepteur;
- Brancher l'appareil sur une autre prise de courant ou un circuit électrique différent de celui auquel le récepteur est connecté;
- Pour toute aide, consulter le distributeur ou un technicien expérimenté radio/TV.

Toute modification non autorisée par les autorités responsables de la conformité peut entraîner la révocation du droit d'utilisation de ce produit.

WIDCOMM et le logo WIDCOMM sont des marques commerciales de WIDCOMM, Inc. Bluetooth et le logo Bluetooth sont des marques commerciales détenues par Bluetooth SIG, Inc., aux États-Unis et concédées sous licence à WIDCOMM, Inc.. Microsoft, Windows, Windows Vista et Outlook sont des marques déposées de Microsoft Corporation. Toutes les autres marques commerciales et déposées citées sont la propriété de leurs détenteurs respectifs.

Les caractéristiques et les spécifications sont sujettes à changement sans préavis. Toutes les marques de commerce et les marques de commerce déposées sont la propriété de leurs propriétairs respectifs.